


Installation Manual
SUNE10-NTG55




Manual Date		2019, 05, 16
Firmware Date	Main	2019, 05, 16
	Sub	2019, 05, 16
	Tw8823	20xx, xx, xx




SUNE10-NTG55

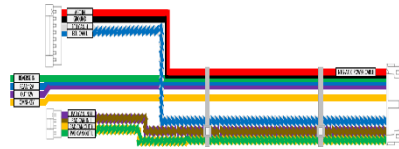


SUNE10-NTG55 Default-Power

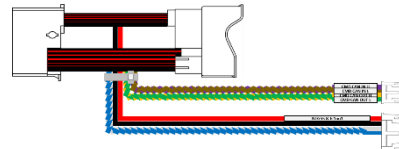


SUNE10-NTG55 Power 1on1

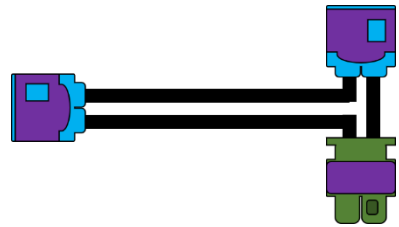

SUNE10-NTG55 LVDS-Cable

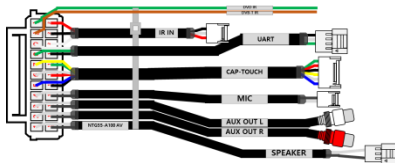

SUNE10-NTG55 Universal Cable

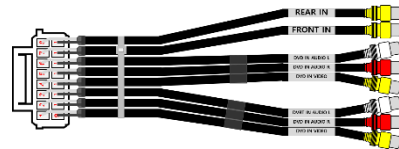

SUNE10-NTG55 AV-Cable



IR - Cable



Capacitive Touch Cable



Key-Pad



Speaker






GLONASS GPS



WIFI/BT Antenna x 2




MIC

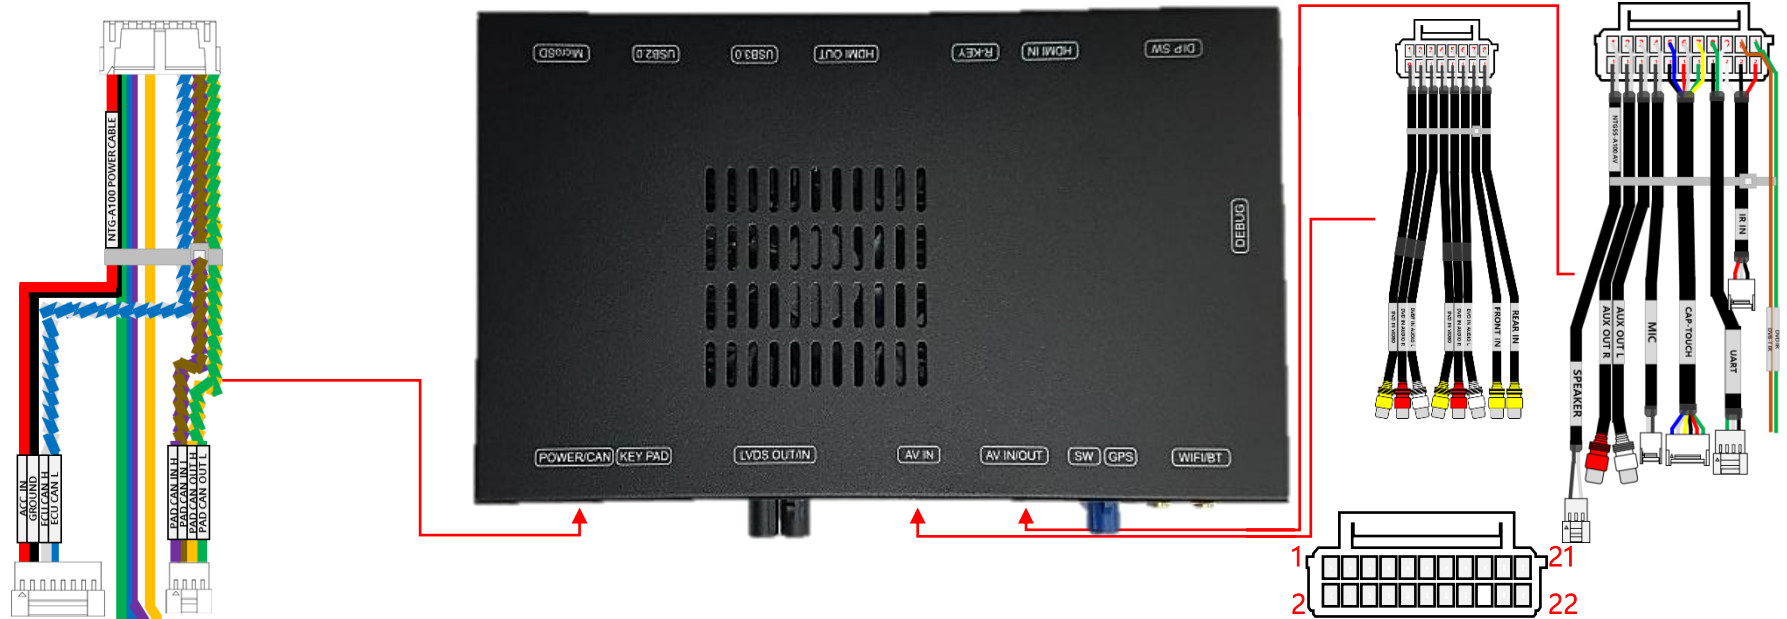

POWER / CAN			
1	ACC IN	2	Ground
3		4	
5	12V output	6	
7	Reverse input	8	Rear 12V output
9		10	Omni Key
11	ECU CAN High Input	12	ECU CAN Low Input
13	MON CAN High Input	14	MON CAN Low Input
15	MON CAN High Output	16	MON CAN Low Output

AV IN	
1, 2	DVB-T Video
3, 4	DVB-T Audio R
5, 6	DVB-T Audio L
7, 8	DVD Video
9, 10	DVD Audio R
11, 12	DVD Audio L
13, 14	Front Camera
15, 16	Rear Camera

AV IN/OUT			
1	Speaker P	2	Speaker N
3	Audio Out R	4	Ground
5	Audio Out L	6	Ground
7	Mic P	8	Mic N
9	CapTouch-I2C-SCL	10	CapTouch-Ground
11	CapTouch-I2C-SDA	12	CapTouch-Power 3.3V
13	CapTouch-Interrupt	14	CapTouch-Reset
15	UART Rx (Interface)	16	UART - Ground
17	UART Tx (Interface)	18	IR Receive - Signal
19	IR - DVB-T	20	IR Receive - Ground
21	IR - DVD	22	IR Receive - Power




DIP SWITCH SETTINGS

Switch	OFF	ON
SW1		Used HDMI Input
SW2		Used Rear Camera Input
SW3		Used Front Camera Input
SW4		Used DVB-T (CVBS) Input
SW5		Used DVD (CVBS) Input
SW6	reserved	
SW7	List of Car Model	
SW8		
SW9		
SW10		

7	8	9	10	Model	Inch
OFF	OFF	OFF	OFF	W213	12.25
OFF	OFF	OFF	ON	W213	8.4

INSTALLATION DIAGRAM

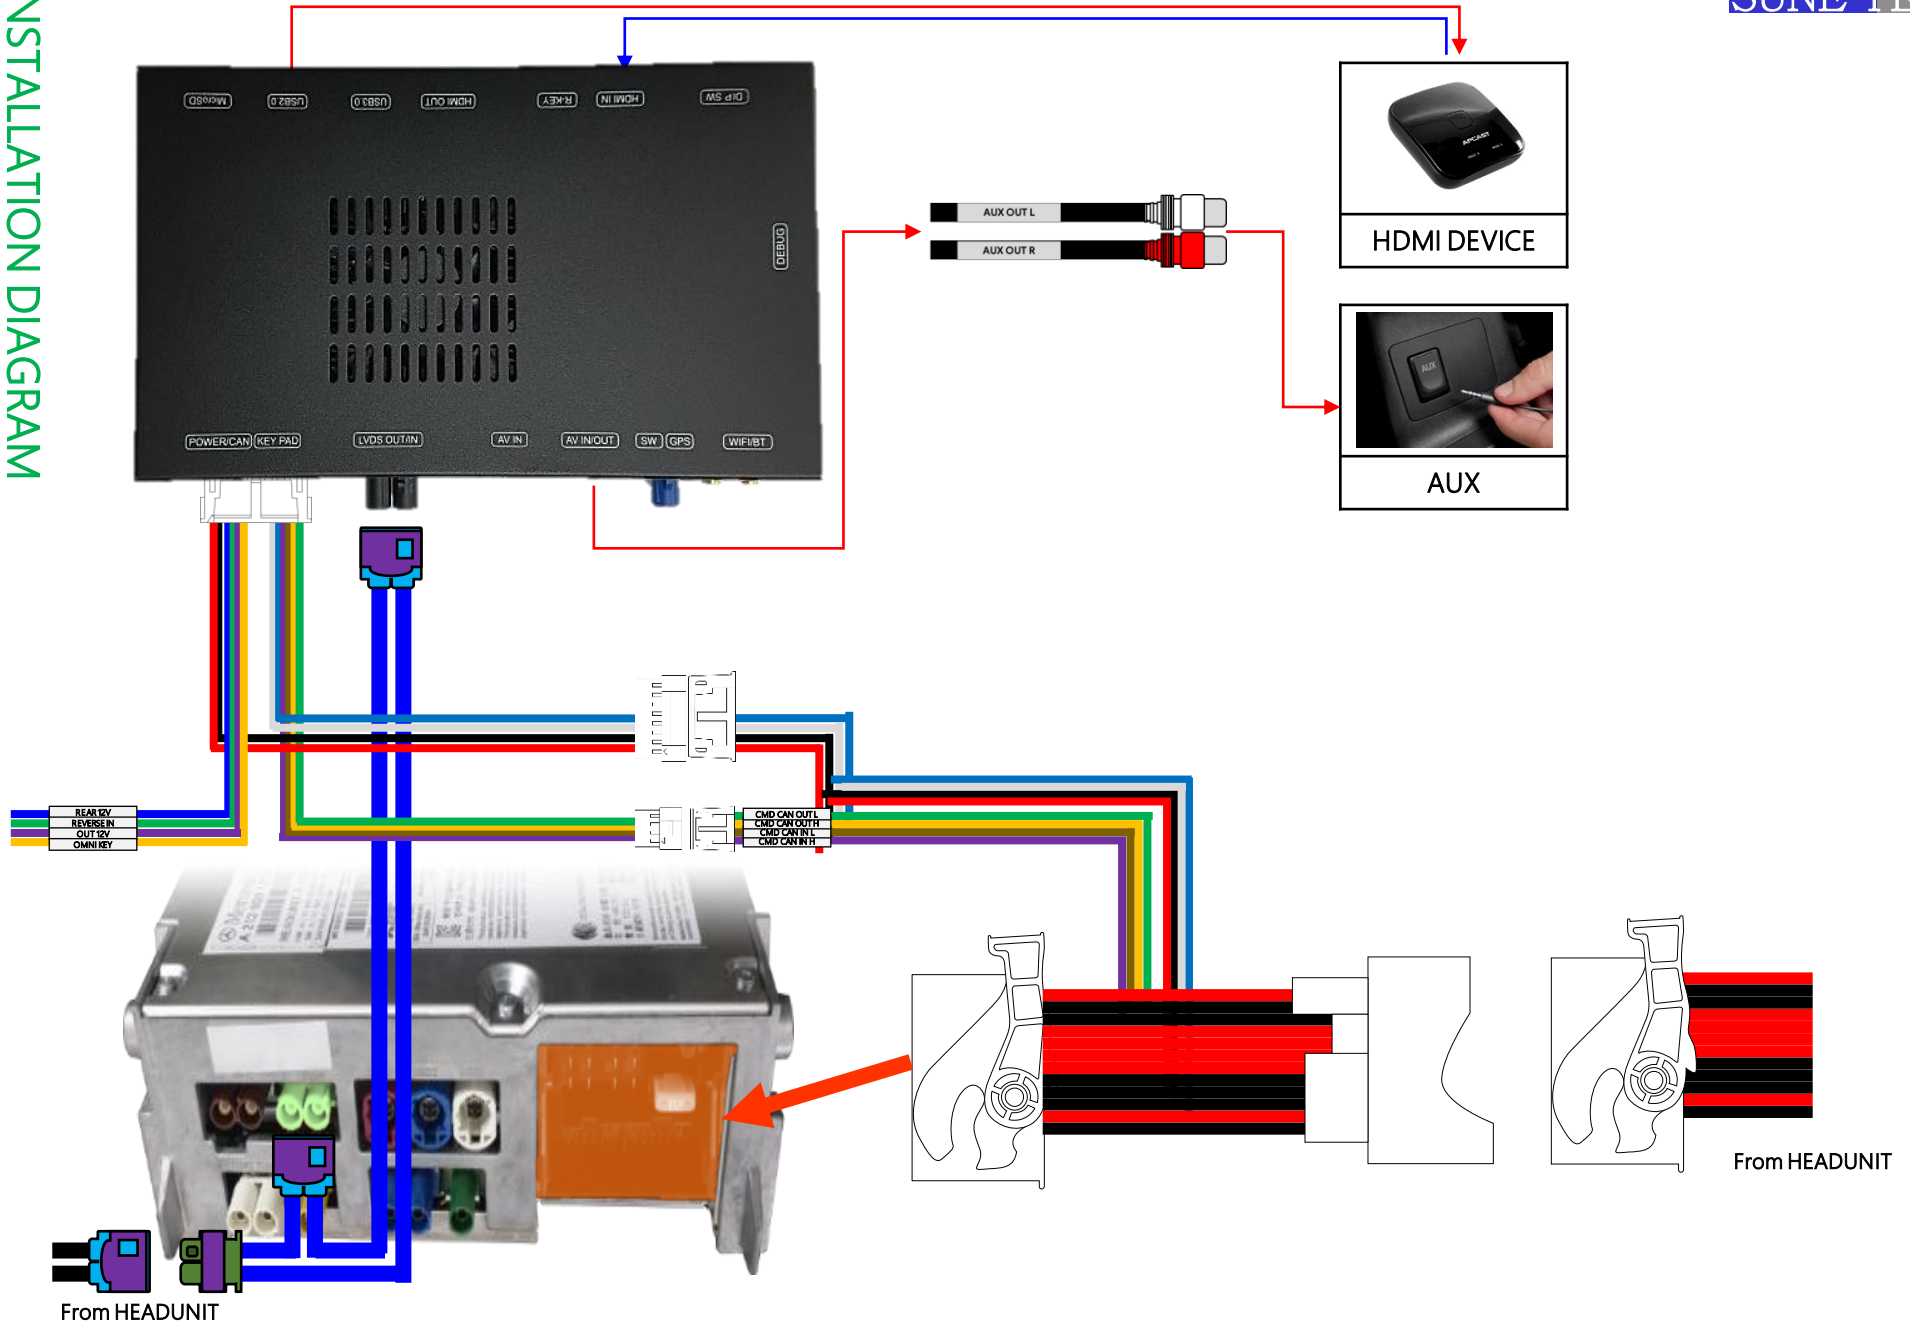



Steer Remote		How to press	Description of operation
1	NAVI CAR	Press button for short time	Return back to OEM Screen form Interface Screen
		Press button for 1 second	Screen is switched in that order switches are activated.
2	RADIO	Press button for short time	Return back to OEM Screen form Interface Screen
	MEDIA		
	TEL		

Steer Remote		How to press	Description of operation
1	Hang Up	Press button for 1 second	Screen is switched in that order switches are activated.

Touch Command		How to press	Description of operation
1	BACK	Press button for 1 second	Screen is switched in that order switches are activated.
2	CAMERA POWER	Press button for short time	Return back to OEM Screen form Interface Screen
	Touch Command		
4	BACK HOME	Press button for short time	In Android mode Working like Back, Home Button



SUNE TECHNOLOGY CO.,LTD No.9,Lane 606,Anping Rd,Tainan
City 70849,TAIWAN TEL:+88662292246 FAX:+88662288104
[Http://www.sune-tech.com](http://www.sune-tech.com)
Shop <http://www.carnavi-tech.com>
SKYPE:sune_tech or hsin_han99